 


## Copy

 
 
Set the document size/tray/orientation → Select features → Use the numeric keypad to enter the desired number of copies → Press the [Start] button

\* Press the [Stop] button to cancel the currently executing copy job.

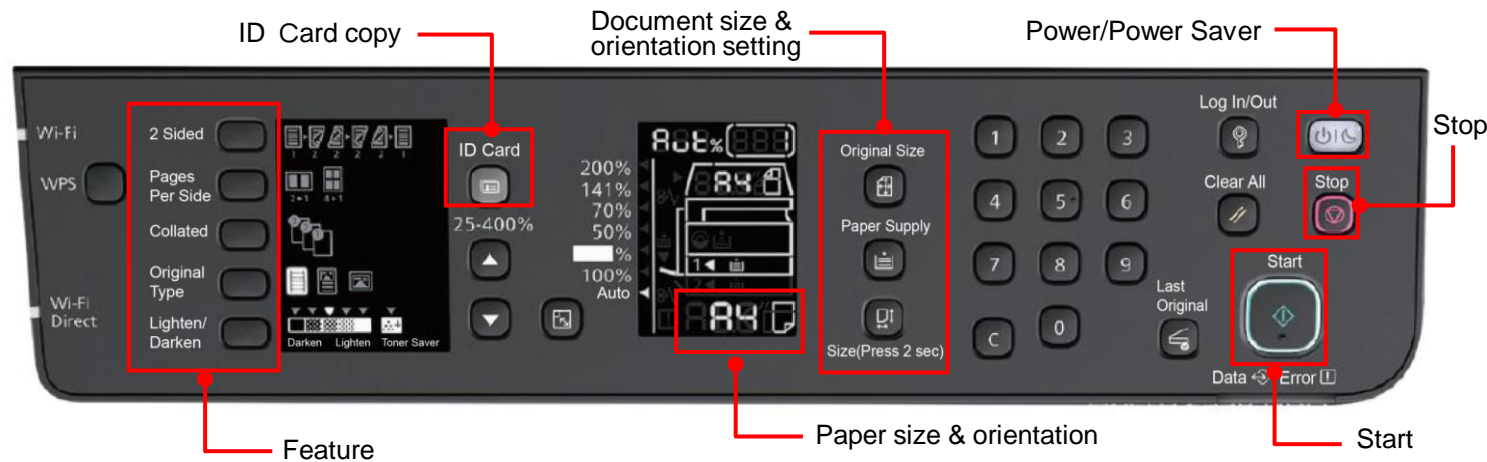



## Scan

Click the [Setting] on the PC and select the scanner → Right click to select [Start scan] → Click [Printer Properties] to select the features → Click [Scan] → Click [Next] and [Import]

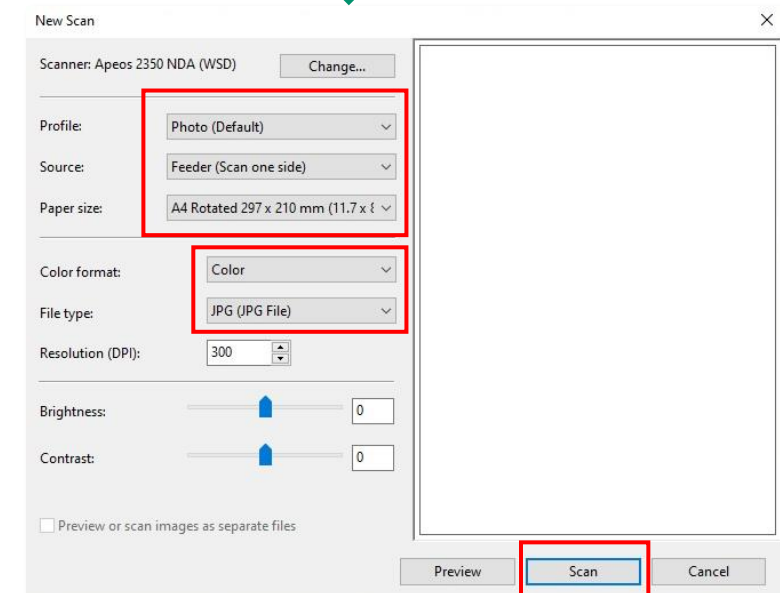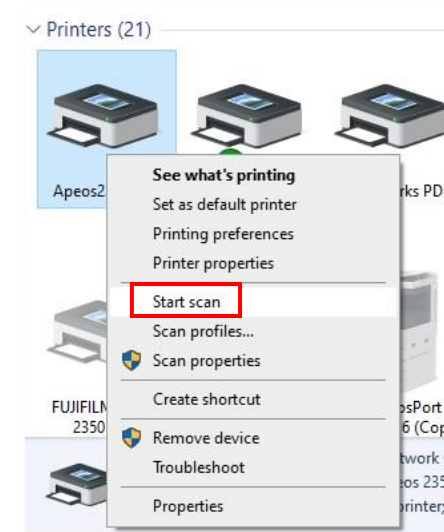

## Print

  Select [Print] → Select the printer and click [Printer Properties] to select the features → Click [OK]

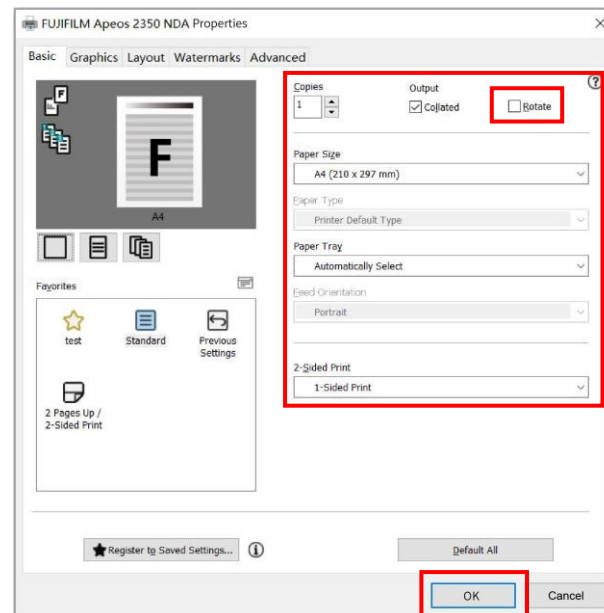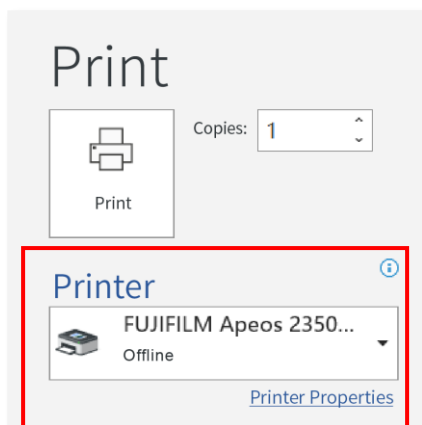

\* When outputting many sets of the same document, each set can be stacked in alternating horizontal vertical orientation to save time when collating.